



## Pictures and Explanation of Assembly


1. Insert roller bearing 6205 2ZJEM to the spur gear: 24 teeth

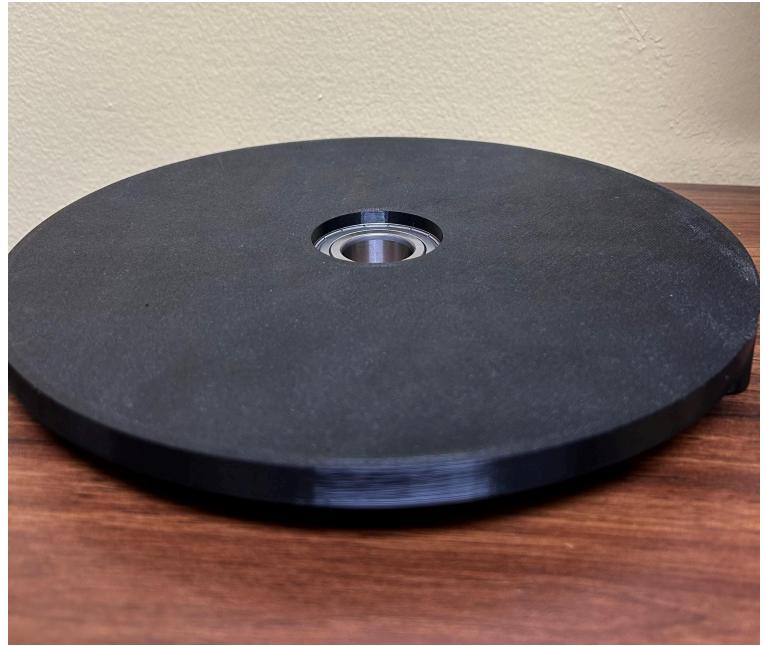

2. Screw in legs to bottom plate using M3 18mm screws, 2 screws per leg

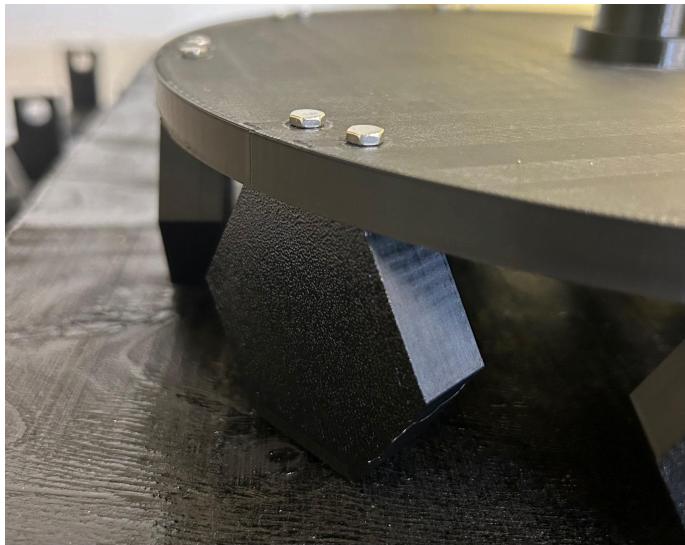


3. Screw in stepper motor to the bottom plate using M3 14 mm screws and push the spur gear: 8 teeth onto the shaft of the stepper motor

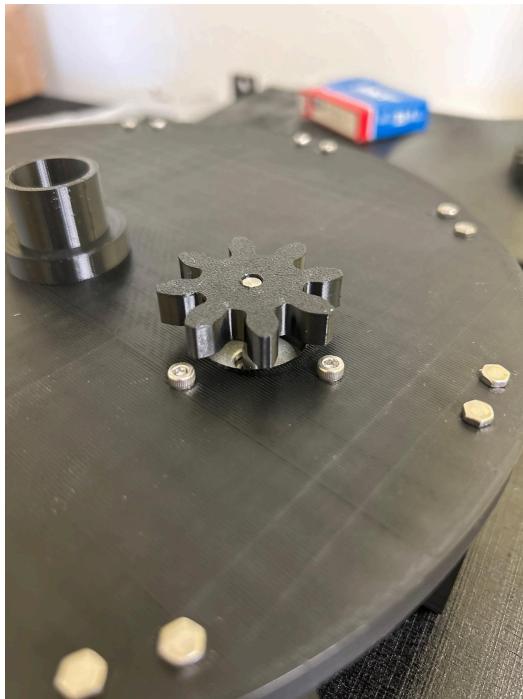

4. Screw in the microswitch using M3 25 mm screws.



5. Place the top plate with the roller bearing through the center piece.

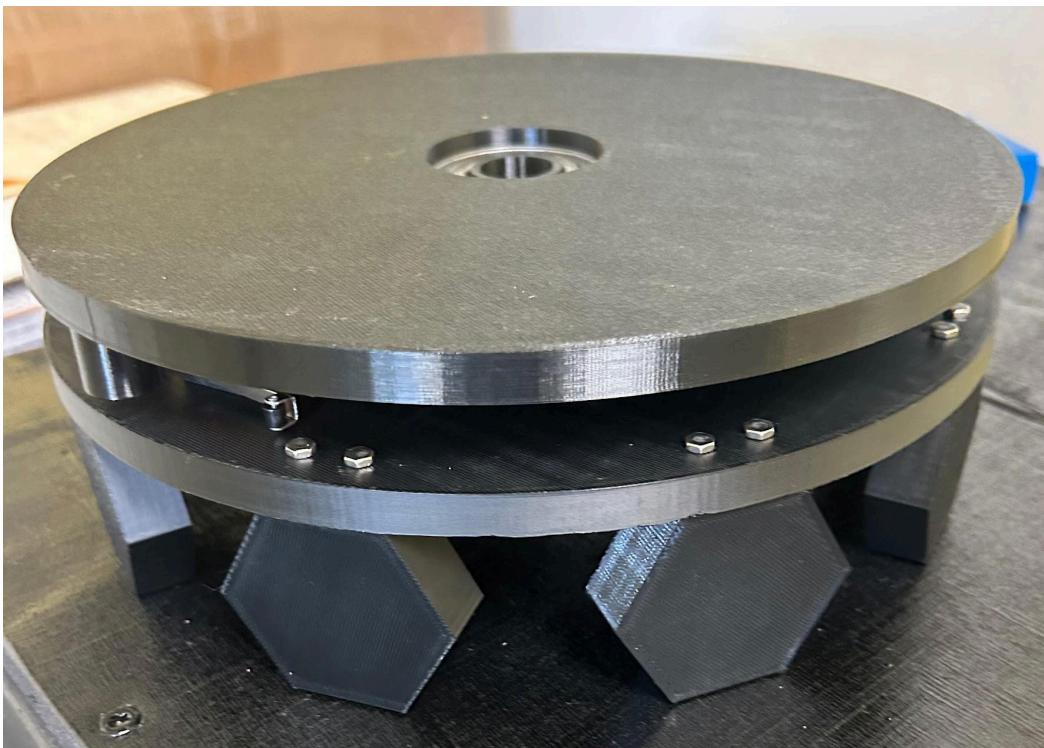

6. Connect the microswitch and stepper motor to the Hextech Board.

